

SAMSUNG PROSTAR DCS- DATE & TIME

1. ENTER SYSTEM PROGRAMMING-
TRANSFER 800.
2. ENTER PASSWORD- DEFAULT 4321
3. PRESS VOLUME UP TO ENABLE
4. PRESS SPEAKER
5. ENTER 505
6. IT WILL SHOW CURRENT DATE & TIME
7. FORMAT IS W-DAY- (0-6) 0= SUN
MM- MONTH 01-12
DD-DATE- 01-31
YY-YEAR- 04-89 (08)
HH-HOUR-00-23
MM-MINUTE-00-59
8. MAY NEED TO RE-ENTER TO VERIFY
9. PRESS TRANSFER TO SAVE & EXIT