

# Toshiba CTX 100 Phone System

Any display phone can be used to change the time on Toshiba CTX 100 system. Do not lift the handset.

Enter programming mode:

1. Press "Hold"
2. Press \* # \* # 1 \* 2 \* 3 \*
3. Display shows "Password ="
4. Enter 0 0 0 0 (or applicable system programming password)
5. Press "Hold"
6. Display shows "Prog ="
7. Enter 9 0 2
8. Press "Hold"
9. Display shows "Select Param"

## Change the date:

1. Press "Intercom" button
2. Enter yymmdd where yy = year, mm = month, dd = day
3. Press "Hold"
4. Press "Hold" (again)
5. List handset and hang up again

## Change the time:

1. Press "Line 1" button (should be button directly above intercom button)
2. Enter hhmmss where hh = hours, mm = minutes, ss = seconds (military time)
3. Press "Hold"
4. Press "Hold" (again)
5. List handset and hang up again