

## **TIME CHANGE INSTRUCTIONS FOR UX 5000/ASPIRE**

---

To set the time for your UX5000/Aspire system:

1. From the System Administrator's telephone (normally extension 301), press CALL1 and dial 828.
  2. Dial two digits for the hour (24 hour)  
For example, 13=1:00 PM.
  3. Dial two digits for the minutes.  
You hear confirmation beeps.
  4. Press SPK to hang up.
-